 
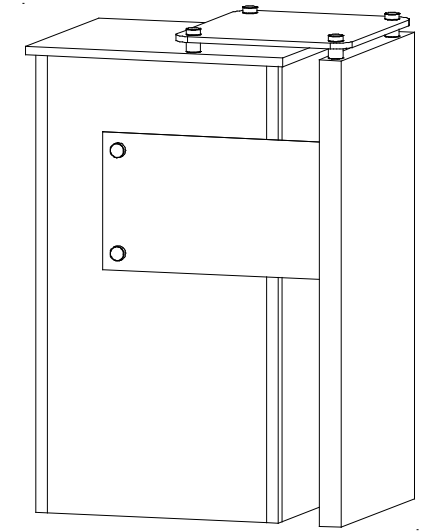 






Item	Qty.	Description
1	1	20"w x 40"h Eco-Panel w/ Door
2	1	40"h 90 degree Corner Connector
3	1	16"w x 40"h Eco-Panel
4	1	40"h 90 degree Corner Connector
5	1	20"w x 40"h Eco-Panel w/ Threaded holes
6	1	40"h 90 degree Corner Connector
7	1	16"w x 40"h Eco-Panel
8	1	40"h 90 degree Corner Connector
9	1	2"w x 40.75"h Counter Support

Steps:


- 1) Assemble kiosk body in numerical order.
Refer to General Information Page.
- 2) Attach Counter Support Leg to assembled kiosk body.
See Counter Support Leg Attachment detail.
- 3) Connect graphic to front of kiosk.
See Graphic Attachment detail.
- 4) Attach shelf supports to velcro on interior of assembled kiosk;
place interior shelf on top of supports
- 4) Place Counter on top of assembled kiosk.
- 5) Attach Plex Counter to top of kiosk using stand-off Barrels and Caps.

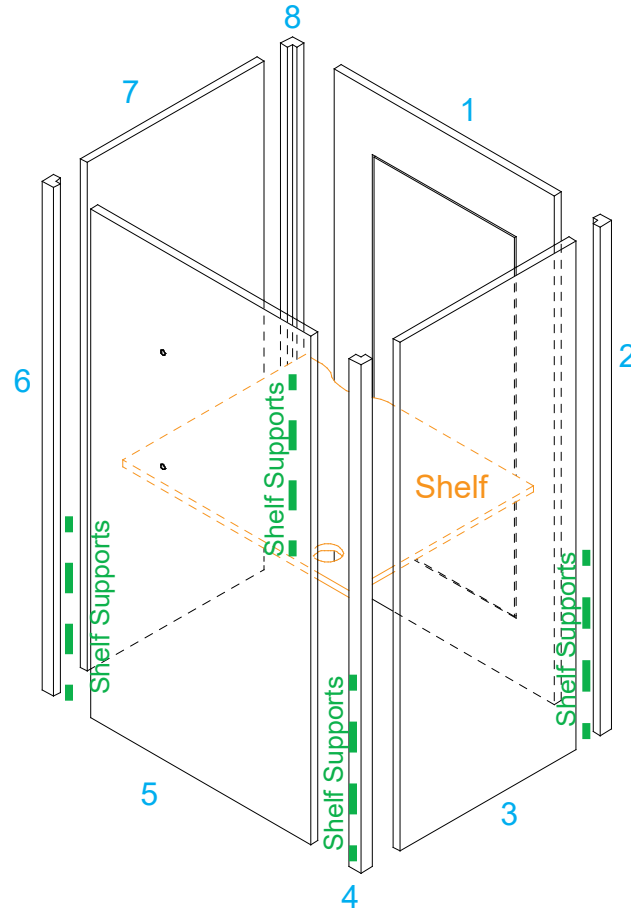

    
When assembled

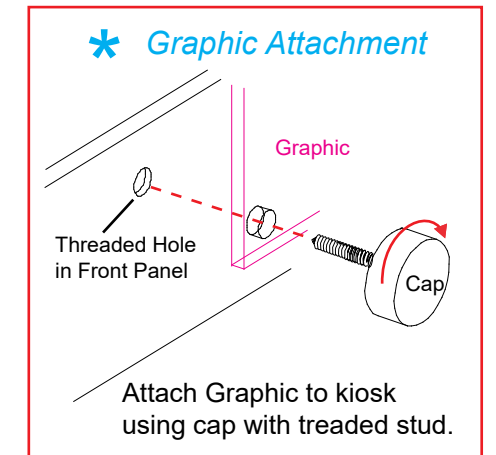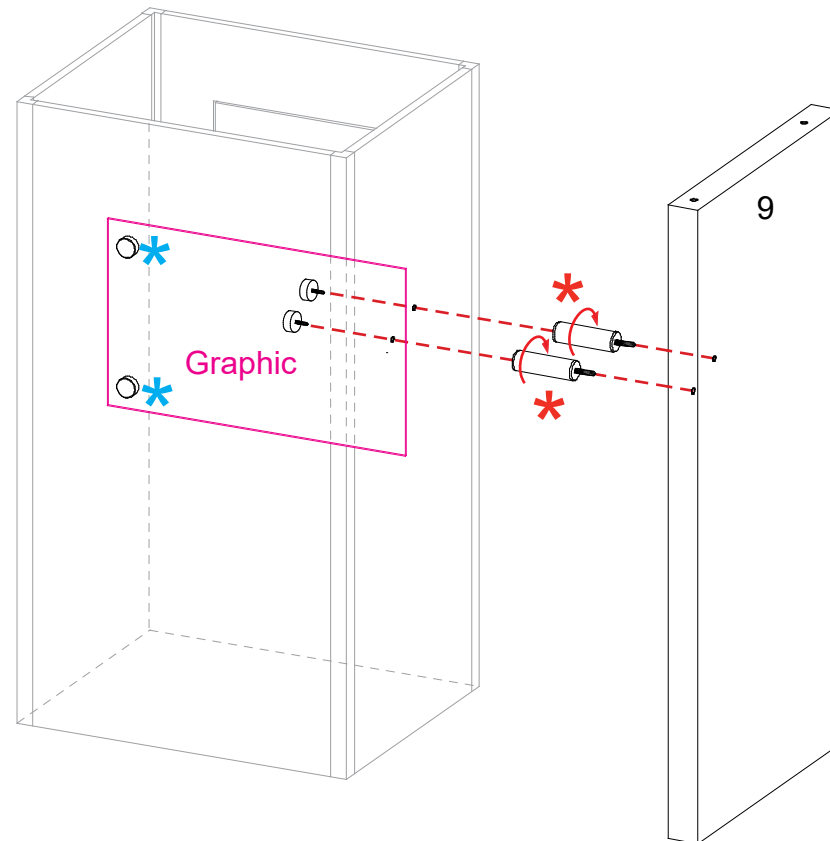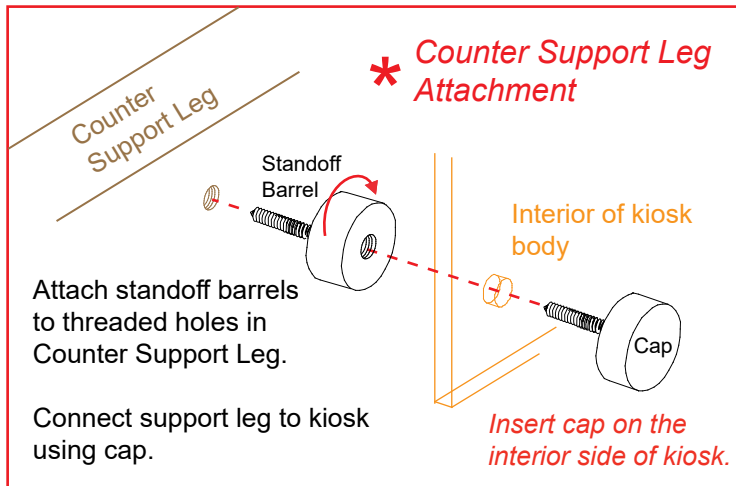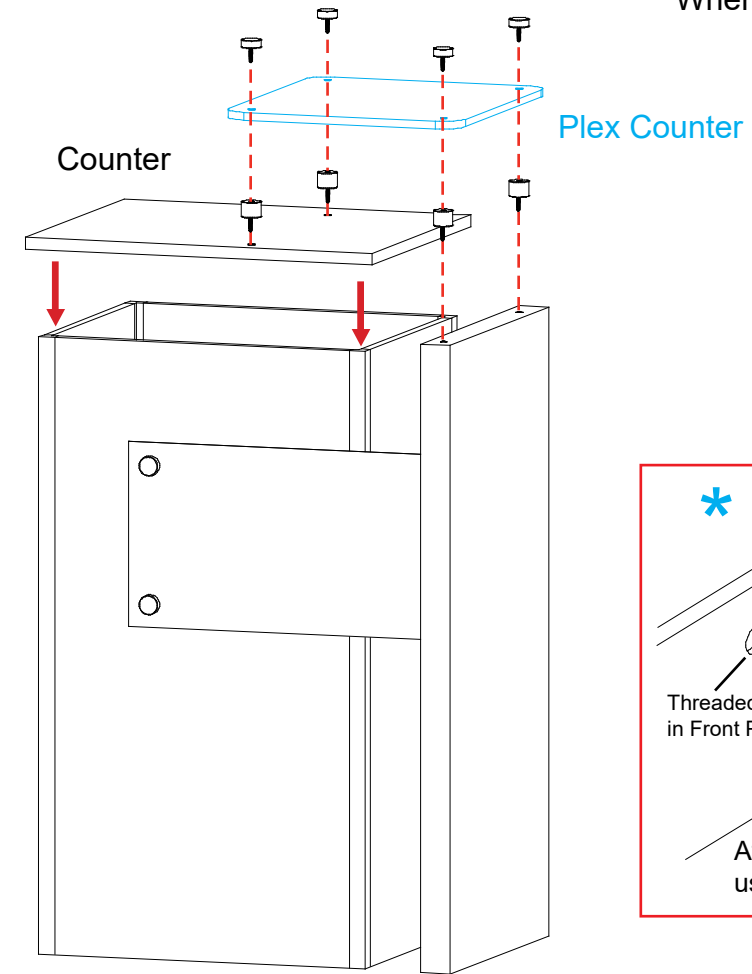


SETUP INSTRUCTIONS

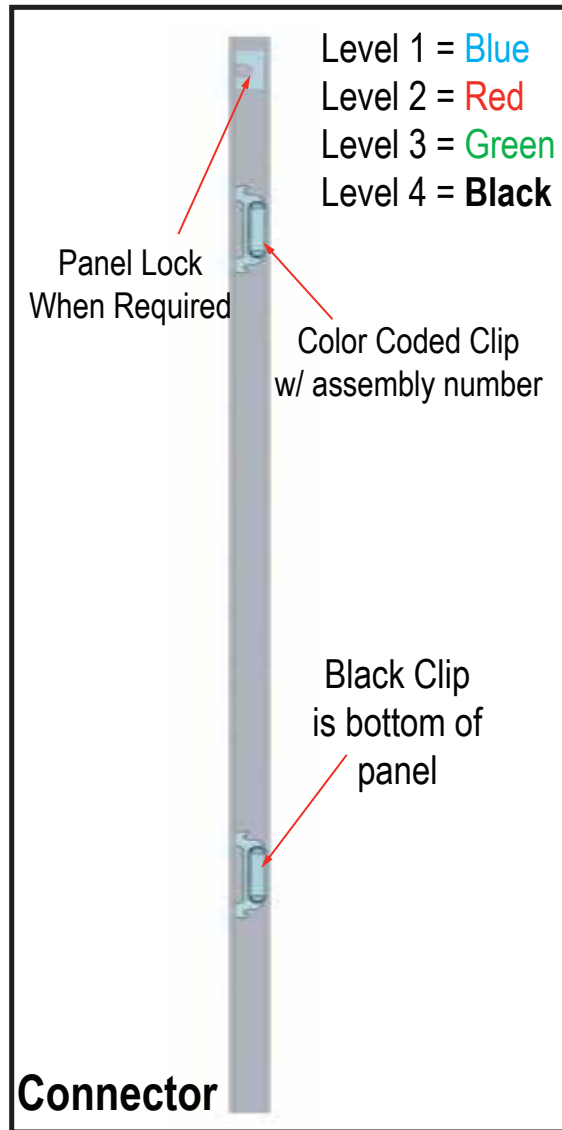


Each component has 2 clips, the lower clip is ALWAYS black. The top clip is color coded to distinguish which level. The color coded clip also contains the numbered label.

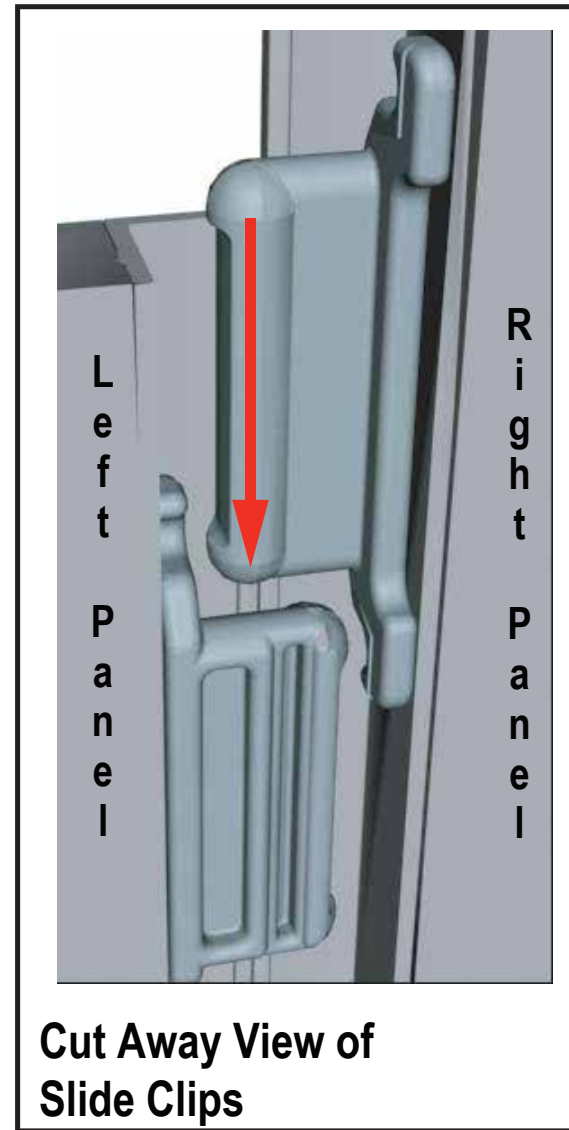

Components connect together by aligning them and sliding downward connecting clips together.

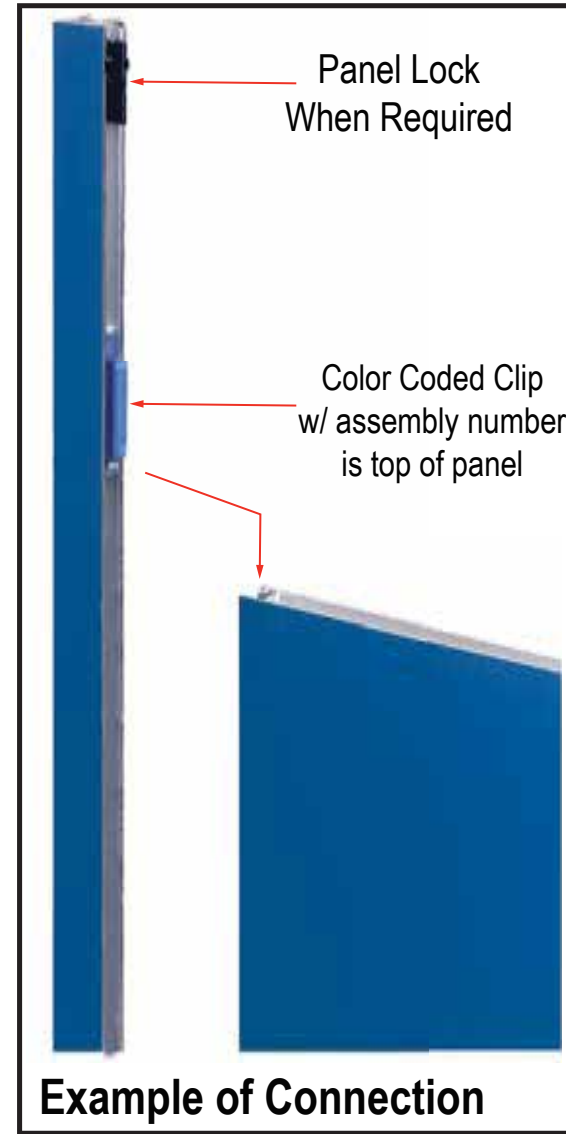


Configurations are assembled from left to right, usually starting with #1 and following the numbered sequence.

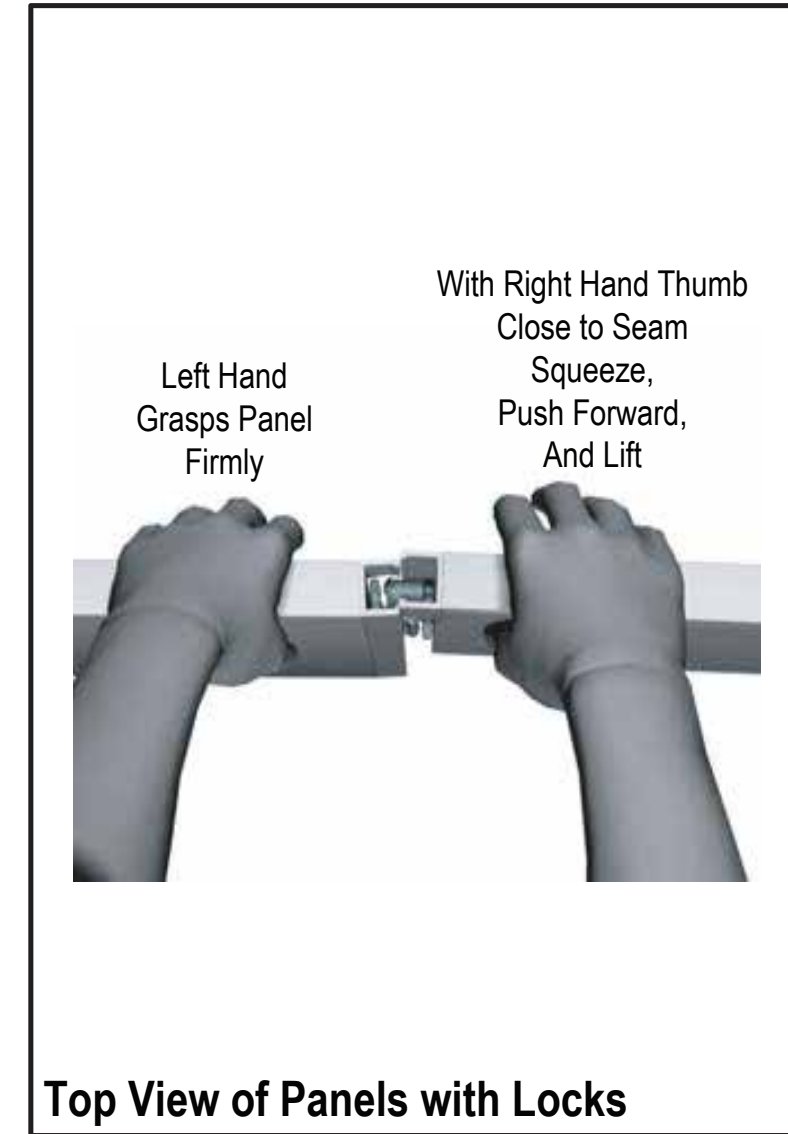


The first level of components contain panel locks that are located at the top of the panel for extra stability and seamless connection. When disassembling panels twist top connection slightly and lift right panel upward.


Top View of Each Level

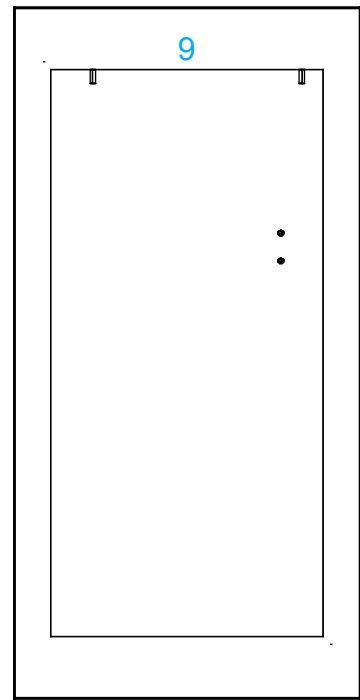


Level 1

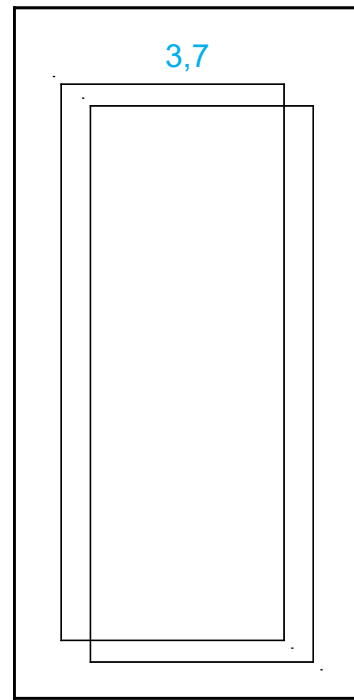


Level 2

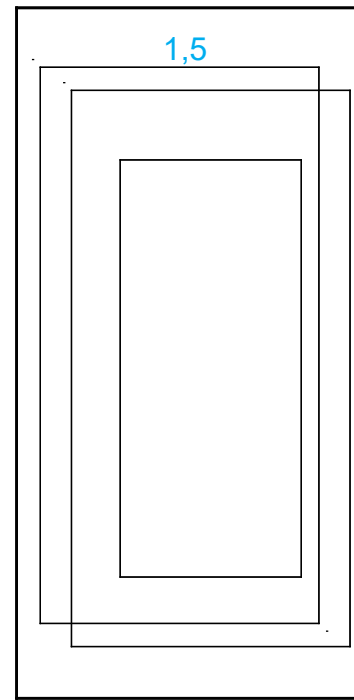


Level 3

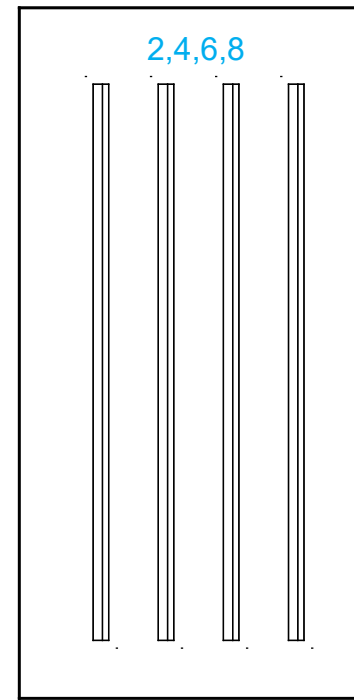

Level 4

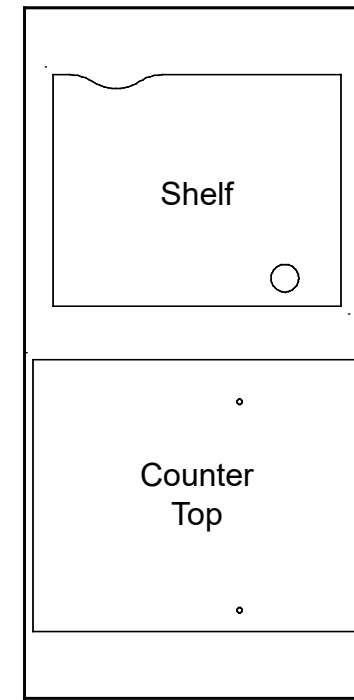

Level 5

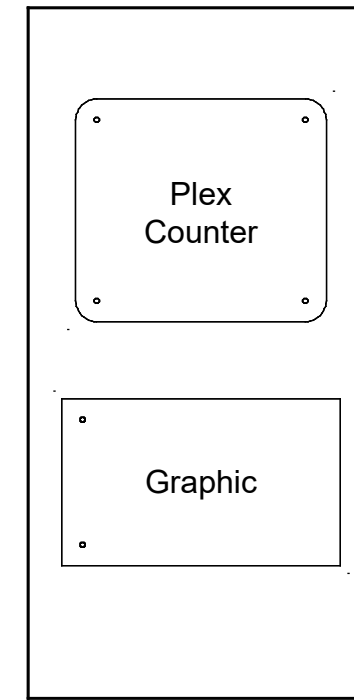

Level 6